


**NEW! Easy Steps to SAVINGS**


**Reloading Instructions**  
 DuraCoat Color Resin Ribbons  
 for Gerber FX® Printers



**STEP 1** Open OEM cassette and remove spent ribbon

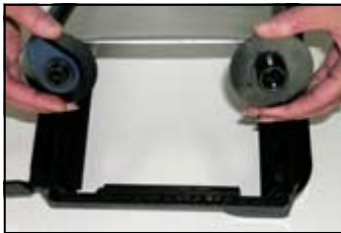

**STEP 2** Remove blue plastic bar from OEM Ribbon

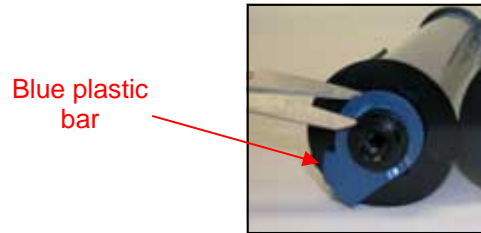

**STEP 3** Remove hubs and gears



**STEP 4** Remove outer wrap from **New DuraCoat** refill and tear at perforation



**STEP 5** Reinsert OEM hubs and gears into DuraCoat ribbon. Be sure that supply side has ridges and take-up side is smooth.



**STEP 6** Place **New DuraCoat** Refill into cassette. Supply side left, take-up side right. Load cassette into printer and begin printing.

